


Tested disinfectants







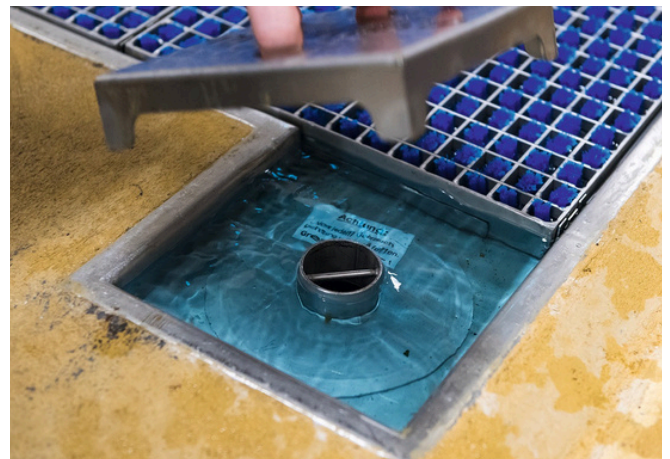

The manufacturers of the following cleaning and disinfecting agents have carried out material suitability tests and confirmed compatibility with our brush strips. In some cases, the tests were carried out in high doses to simulate compatibility over a long period of time. All disinfectants should be dosed and used according to the manufacturer's recommendations. **All listed disinfectants must be used in accordance with the manufacturer's dosage and application recommendations.**

Long-term use – permanent disinfection (1/2)













All listed disinfectants must be used in accordance with the manufacturer's dosage and application recommendations.



Manufacturer	Tested disinfectants	Tested concentration in %	Duration of the test	Approval by manufacturer
	BTS 2000 BTS 2001	1,8	90 days	
	Des AM blau V irodex			
	Calgonit DS 683	5	19 days	
	SaniPerfect VS61	2	70 days	
	Suredis VT1			
	neoform K plus	0,4	30 days	
	neoform K dis	0,5		

Tested disinfectants

Long-term use – permanent disinfection (1/2)

Manufacturer	Tested disinfectants	Tested concentration in %	Duration of the test	Approval by manufacturer
 ECOLAB® PROTECTING WHAT'S VITAL™	P3 topax 990	3	28 days	
 kersia ® INVENTING A FOOD SAFE WORLD	Deptal AS	2	33 days	
		20		
	1+1 Wofasteril SC super	1	30 days	
 MENNO CHEMIE VERTRIEB GMBH	MENNO® Clean	6 und 8	120 days	
	MENNO® Florades			
	A-QUASAN®			
	Lerasept AC	2	30 days	
	Lerasept SOC	6		
	HT Antisept 14 G forte	2	28 days	











Tested disinfectants

Short-term use – cleaning the brush strips (1/1)



The disinfectants listed under 'Short-term use' are not intended for permanent disinfection. They may only be used for short-term cleaning of the brush strips. After use, rinse thoroughly with drinking water to remove any residue.



Manufacturer	Tested disinfectants	Tested concentration in %	Duration of the test	Approval by manufacturer
	ASiRAL SRC	100	10 days	
	Suma San con. D10.1 conc	3	30 days	
	P3 topax 66	5	28 days	
	Lerades Clp 601	2	30 days	
	Lerasept L420	2,5		
	Blaue Sandy	100	4 days	
	Goldene Sandy			